



# AirBroidery



## Send designs wirelessly – straight to the machine, no USB sticks needed.

No more time-consuming trips to the machine, no more lost USB sticks. The AirBroidery stick, plugged into the machine, transfers your embroidery designs via Wi-Fi – from any device, from anywhere in your production facility.

### 1. Scan the QR code – instantly connected.

Simply scan the code on the machine and your phone or PC is connected. No password, no installation.

#### Transfer designs via drag & drop.

Open the browser of your choice, drag your embroidery file into the window – and click "Upload". That's it.

#### The file is on the machine straight away.

The design appears directly on the machine, just like plugging in a USB stick. Simply select and stitch.

#### Connect to your company network.

AirBroidery connects to your existing Wi-Fi. From then on, reach the machine from any device on the network without extra steps needed.

