

AirBroidery Setup Guide

Connect to AirBroidery

Use the QR code to connect to **AirBroidery**.
Alternatively, select the SSID shown on the display and enter the password **zскеinlebenlang**.

Access the Web Interface

Once connected, open a web browser and enter **192.168.4.1** in the address bar. You can now transfer embroidery designs wirelessly to the machine.

Drag and drop embroidery files into the upload area, or click the area to select files manually.

Click Upload to transfer the selected file. The design will then be available on the machine's USB storage device.

Connect AirBroidery to Your Wi-Fi Network

Go to the Settings page.

Search for available Wi-Fi networks and select the network you would like AirBroidery to join.

Once connected, **AirBroidery** disables its own access point and becomes available through the IP address assigned by your network.

The assigned IP address is displayed on the **AirBroidery** screen.

To access **AirBroidery** at this address, your device must be connected to the same network.

If the selected network is unavailable or rejects the connection, **AirBroidery** automatically returns to its default configuration and starts broadcasting its own Wi-Fi network again.

You can also manually restore this mode by pressing and holding the button for more than three seconds while **AirBroidery** is powered on.

Note

A copy of these setup instructions is stored on the **AirBroidery** itself. Simply connect the device to a PC to access them.

