

Safety Notice: Before performing any assembly or adjustment work on a ZSK embroidery machine, you must absolutely disconnect it from the power supply and secure it against re-energization. To do so, unplug the machine and ensure no residual energy is present. Always observe the general safety precautions for working on electrical machinery. All assembly work may only be carried out by trained service staff.

Conversion Kit Cap Protection


Subject: Removal of the standard protective bracket, and
installation of the deflector item no. 361.998.907

The standard deflector


Remove the standard cap deflector



The tools you need:
1 x PH1 screwdriver
1 x 2.5mm ball end Allen key

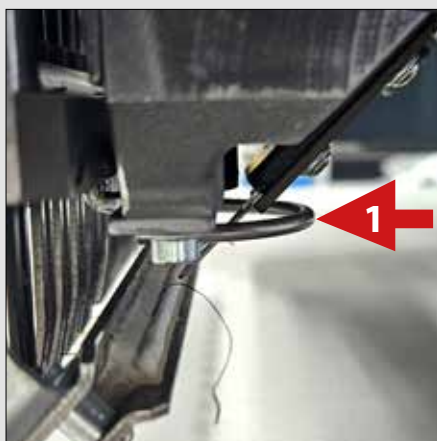

The bracket [1] is a safe deflector, but takes up a lot of valuable space.

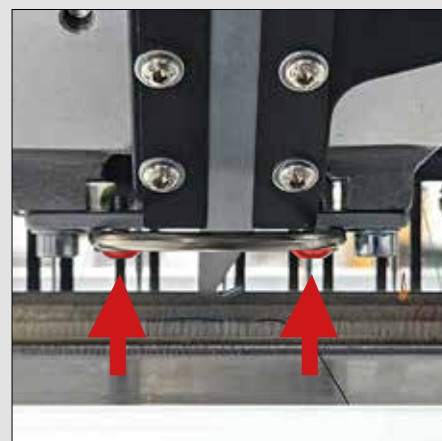

Carefully loosen and remove the screws. The protective bracket can now be easily removed.

The new deflector

Install the new cap deflector



Now please loosen and remove ONLY the lower screws [1] on the plate. Do not loosen any other screws here.



Now align the new guard as shown in the picture above. Secure it with the screws provided. Use the screw threads of the screws you removed earlier.



The new deflector [1] gives you a lot more space. You can now embroider closer to the brim.